


# FES10M Monitored Electric Strike Installation Instructions

### FES10M Monitored Electric strike

## **Door Latch Position**

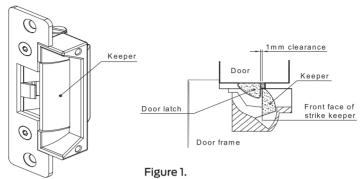

As drawn above, there should be 1mm gap between the door latch and the front face of strike keeper to prevent the door from exerting pressure on the keeper when the door is closed.


## Mounting steps for FES10M

- 1. For aluminum or metal door frame, refer to Figure 2 (brackets are supplied for assembly), For timber door frame refer to Figure 3. Mark and drill the hole sizes as indicated on Figure 2 and Figure 3.
- 2. Make sure electrical connections are followed correctly.
- 3. When the door is closed, ensure there is no pressure on the front face of strike keeper.
- 4. When all the above checks are completed, secure the strike with supplied screws and recheck operation.

### Power input 12VDC or 24VDC wirings

Power Input	12 VDC – current 200 mA 24 VDC – current 100 mA Note: Select from pre-wired assembly to use plugs. There is no polarity on power input.			
Wire output	12 Volt plug:	24 Volt pl	24 Volt plug:	
	RED	RED	•	
	BLUE 12 VD	DC/ 200 mA	24 VDC/ 100 mA	
	YELLOW	YELLOW		
	BLACK —	BLACK	•	
DSS ( Door Status Sensor)	Black (Common)	Blue (Normally Open)	Orange (Normally Close)	
DSS contact rating	Max. current 2A Max. voltage 30VDC	Note: DSS available on FES10M only		


### Install on metal or aluminum door frame

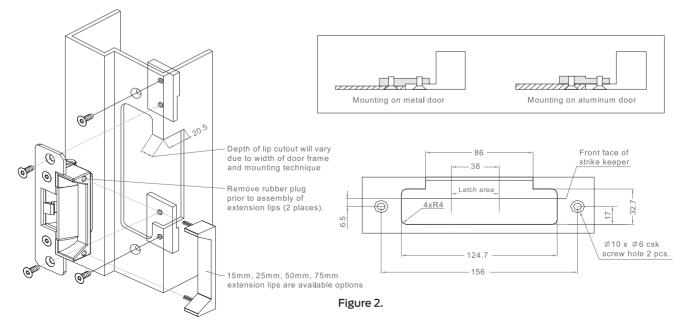




## FES10M Monitored Electric Strike Installation Instructions

### Install on wooden door frame

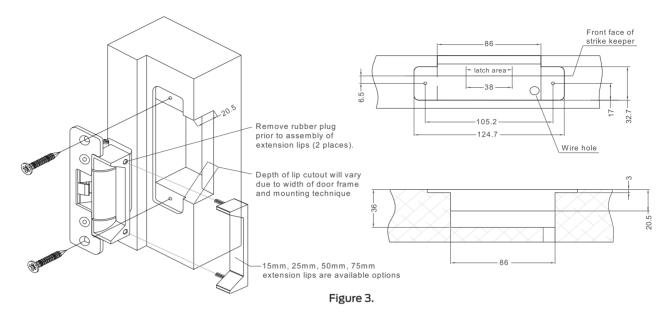

Conversion: Power to Lock (PTL) <=> Power to Open (PTO)

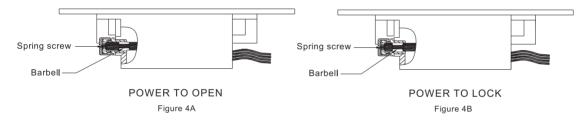

### WARNING:

Do not attempt to swivel the keeper while changing the function, this will damage the barbell mechanism.

## Procedure to convert Fail Secure (PTO) (Figure 4A) to Fail Safe (PTL) (Figure 4B):

Step 1: Remove the spring screw from the end part of the strike body.

Step 2: Remove the Barbell to reverse in position with long part inside and short part out.

Step 3: Replace the spring screw.

## Procedures to convert Fail Safe (PTL) (Figure 4B) to Fail Secure (PTO) (Figure 4A):

Step 1: Remove the spring screw from the end part of the strike body.

Step 2: Remove the Barbell to reverse in position with short part inside and long part out.

Step 3: Replace the spring screw.



PFS0006

1800 098 094 info.au@allegion.com fshlocking.com.au

©Allegion 2022